

# TRANSMITTER PROGRAMMING AND OPERATION

## TRANSMITTER LEARNING

Important! The remote starter will hold 3 transmitter codes. It is recommended that when programming in transmitters, you fill up all three transmitter codes, even if only using one or two transmitters. This will clear all other transmitter coding from the unit and prevent stray coding or possible interference from other remote transmitters.

- 1 Turn ignition ON-OFF-ON
- 2 Press the valet switch TWICE (button on the antenna), siren/horn (optional) will chirp once and/or parking lights will flash each time the button is pressed
- 3 Press and hold the valet switch, siren/horn will chirp 3 times & parking lights will turn on to indicate you have entered Transmitter Learning Mode
- 4 Press button 1 (Lock) of every transmitter to be coded. For 2-Button Remotes press both buttons together, for 1 Button remotes press the Start button. The siren/horn will chirp once and the parking lights will flash once to indicate success fully learning. (System will exit Learn Mode and lights will turn off after 10 seconds of no activity.)
- 5 Turn ignition OFF and the unit will exit code-learning mode

## REMOTE FUNCTIONS

The following is a summary of the buttons used to control basic functions of the remote starters

COMMAND	1 BUTTON	1-WAY / 2-WAY LED	2-WAY LCD	FUNCTION
	2 BUTTON			
LOCK/ARM	BUTTON 1 (HOLD 2 SECS.)	BUTTON 1	BUTTON 1	LOCK DOORS & ARM ALARM SYSTEM
	BUTTON 1			
UNLOCK/DISARM	BUTTON 1 (TWICE)	BUTTON 2	BUTTON 2	UNLOCK DOORS & DISARM ALARM SYSTEM
	BUTTON 1			
SILENT LOCK/UNLOCK	N/A	BUTTONS 1 & 2 TOGETHER	BUTTONS 1 & 2 TOGETHER	SILENTLY LOCK/UNLOCK, ARM/DISARM VEHICLE
	N/A			
TRUNK RELEASE	N/A	BUTTON 4 (HOLD 2 SECS.) OR BUTTON 2 (HOLD 2 SECS.)	BUTTON 2 (HOLD 2 SECS.)	OPENS TRUNK (MAY UNLOCK DOORS)
	N/A			
START	BUTTON 1	BUTTON 3	BUTTON 3	REMOTE START VEHICLE
	BUTTON 2			
EXTEND RUN TIME OR IDLE MODE (WITH ENGINE RUNNING)	BUTTON 1	BUTTON 3	BUTTON 3	EXTENDS RUNTIME BY 10 MINUTES
	BUTTON 2			
REMOTE SHUTDOWN	BUTTON 1 (HOLD 2 SECS.)	BUTTON 3 (HOLD 2 SECS.)	BUTTON 3 (HOLD 2 SECS.)	REMOTE STOP THE VEHICLE WHILE RUNNING
	BUTTON 2 (HOLD 2 SECS.)			
TURBO MODE REMOTE ACTIVATION (WITH ENGINE RUNNING)	N/A	BUTTON 4	BUTTON 4	ACTIVATES TURBO TIMER COUNTDOWN
	N/A			
STATUS REQUEST	N/A	BUTTON 4 (2-WAY ONLY)	BUTTON 4	DISPLAYS STATUS OF VEHICLE
	N/A			
TEMPERATURE STATUS REQUEST	N/A	N/A	BUTTON 4 (3X)	DISPLAYS AMBIENT INTERIOR TEMPERATURE OF VEHICLE
	N/A			
VOLTAGE STATUS REQUEST	N/A	N/A	BUTTON 4 (4X)	DISPLAYS THE VOLTAGE OF THE VEHICLE'S BATTERY
	N/A			

## BUTTON FUNCTIONS

- Button 1 Lock
- Button 2 Unlock
- Button 3 Start/Stop
- Button 4 Function

COMMAND	1-WAY/2-WAY LED	2-WAY LCD	FUNCTION
CAR FINDER	BUTTONS 3 & 4	FUNCTION MENU (HOLD BUTTON 4 FOR 3 SECONDS)	ACTIVATES SIREN/HORN ON VEHICLE AND FLASHES PARK LIGHTS FOR 5 SECONDS
PANIC	BUTTON 1 (HOLD FOR 2 SECS.)	BUTTON 1 (HOLD FOR 2 SECS.)	HONKS HORN, SIREN AND PARK LIGHTS FLASH (IF APPLICABLE) FOR PROGRAMMED ALARM DURATION
DRIVER'S PRIORITY UNLOCK (IF INSTALLED)	BUTTON 2 (2X WITHIN 3 SECS.)	BUTTON 2 (2X WITHIN 3 SECS.)	DRIVER'S DOOR WILL UNLOCK FIRST THEN ON SECOND PRESS ALL DOORS UNLOCK
COLD START SELECTION (MUST BE ENABLED EACH TIME FOR USE)	BUTTON 2 & 3	BUTTONS 1 & 3	TOGGLES COLD START MODE ON/OFF
AUXILIARY 1	BUTTON 1 & 3	BUTTONS 1 & 4	ACTIVATES AUX 1
AUXILIARY 2	BUTTON 2 & 3	BUTTONS 2 & 4	ACTIVATES AUX 2
AUXILIARY 3	N/A	FUNCTION MENU	ACTIVATES AUX 3
AUXILIARY 4	N/A	FUNCTION MENU	ACTIVATES AUX 4
REMOTE SLEEP MODE	N/A	BUTTONS 1 & 2 (HOLD FOR 5 SECS.)	PUTS REMOTE TO SLEEP NO FUNCTIONS AVAILABLE WHILE IN SLEEP MODE