
REMOTE CHARGING / 2 WAY LCD AND LED ADDITIONAL INFO

Solace 2-way remote transmitters use Li-ion rechargeable batteries. Following the guidelines below will prolong the life of the battery in your Solace transmitter.

Use Solace charging accessories. ONLY use the chargers and cables supplied with the Solace transmitters. Charging with a non-Solace accessory can damage the battery and void the warranty on your transmitter. If charging your transmitter via the USB port on your computer or laptop, these ports usually have no power if in “sleep” or “hibernate” mode or when the computer is shut down.

Avoid over-charging. Your Solace transmitter will be fully charged in 2 to 3 hours. Do not leave your transmitter plugged in for extended periods of time as this can damage the battery.

Avoid over-discharging. Solace transmitters are designed to notify via warning beeps once the battery is low. It is important to charge your battery as soon as possible after receiving these warnings. Allowing the Li-ion battery to continually be fully depleted can dramatically reduce its lifespan. Solace recommends charging your remote transmitter for 2 hours every two weeks.

Storage: For periods of longer than one month without use, fully charge the remote transmitter for 2 hours then turn the remote off by pressing and holding buttons 1 & 2 (lock and unlock) together for 5 seconds, and store in a dry dark place.

Temperature: Avoid leaving your Solace transmitter in direct sunlight or extreme heat conditions for any period of time. Extreme heat will reduce the life of the battery. Extreme cold will reduce the battery's charge capacity until the remote reaches normal operating temperature (5C to 40C).

Physical Damage: If your Solace transmitter becomes physically damaged in any way, please do not attempt to charge the transmitter. Avoid use immediately and contact your Solace dealer.

SOLACE

the evolution of auto-connectivity™



REMOTE CHARGING / 2 WAY LCD AND LED

BEST PRACTICES



SOLACE CHARGING ACCESSORIES



BEST PRACTICES

DO

Use ONLY Solace charging accessories

Charge the transmitter for 2 hours every 2 weeks

Charge the transmitter immediately after receiving a "Low Battery" notification

Charge & shut off the transmitter if storing for longer than one month

Store the remote in a dry dark place

DO NOT

Use ANY non-Solace charging accessory

Charge the transmitter for more than 8 hours

Allow the transmitter to completely lose power

Store the transmitter for longer than 1 month with no power

Store or leave the transmitter in high heat or damp environments

Charge or use the transmitter if physically damaged
