


MODULE

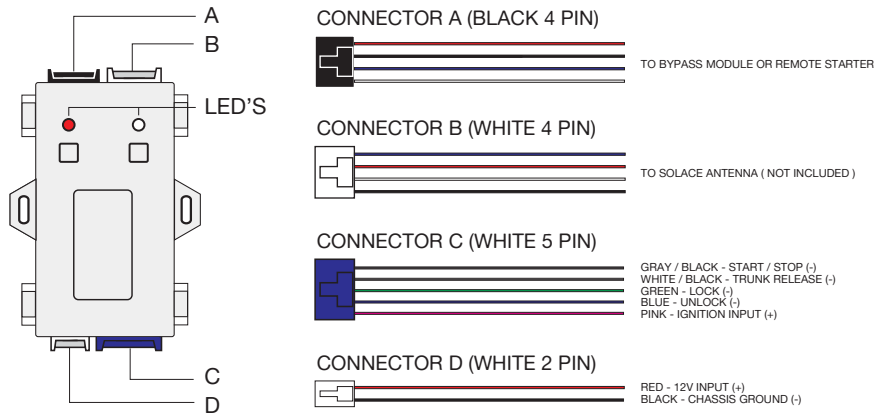

DIAGNOSTICS

RED LED (FLASHING / ON)

- 1x** Protocol Option 1
- 2x** Protocol Option 2
- 3x** Protocol Option 3
- 4x** Protocol Option 4
- ON** Ignition On (D2D, Analog IN)

WHITE LED (FLASHING)

- 1x** Data communication from connected device.
- 2x - 10x** Option Programming

PROGRAMMING

DATA PROTOCOL SELECTION

- 1** Leave Ignition in OFF position. Close all DOORS, HOOD, TRUNK.
- 2** Press programming button (antenna button) 8x within 10 seconds (White LED on SIC3-RFK will flash 1x)
- 3** Choose your protocol below by pressing the programming button:
TYPE 1 - Press 2x - iDataLink RF
TYPE 2 - Press 4x - Fortin RF / ADS-ALCA / ADS-BM/Z
TYPE 3 - Press 6x - D2D
TYPE 4 - Press 8x - ESP2
- 4** After 5 seconds White LED will flash according to your selection.

REMOTE PROGRAMMING

REMOTE PROGRAMMING **ONLY REQUIRED FOR D2D, ESP2, and KEYLESS ENTRY

This step ONLY required when using the SIC3-RFK as Keyless Entry, D2D & ESP2 protocol, or a analog output device (controlling analog inputs on 3rd party remote starters without datalink).



OPTIONS

MENU 1*

	Option 1	Option 2	Option 3	Option 4
1-01 Ignition Locks	Enabled	Disabled	Unlock Only	
1-02 Lock / Unlock Options	Both 1x	Lock x1 / Unlock x2	Lock x2 / Unlock x1	Lock x2 / Unlock x2
1-03 Lock Pulse Timing	0.8 Secs.	100 mS	3 Seconds	8 Seconds
1-04 Unlock Pulse Timing	0.8 Secs.	100 mS	3 Seconds	8 Seconds
1-05 Trunk Pulse Timing	0.8 Secs	100 mS	3 Seconds	8 Seconds
1-06 Park Light Output	On	Off		
1-07 Start / Stop Pulses	1x On / Off	2x On / Off	3x On / Off	
1-08 Auxiliary Timing	0.8 Secs	Latched	2 Secs.	4 Secs.
1-09 Auxiliary Timing	0.8 Secs	Latched	2 Secs.	4 Secs.
1-10 Horn Pulse Timing	10mS	50mS		


 
 
 
 

 
 


Menu 2*

	Option 1	Option 2	Option 3
2-01 Start/Stop Output	Start / Stop**	Park Lights	See Table
2-02 Lock Output	Lock	Park Lights	See Table
2-03 Unlock Output	Unlock	Park Lights	See Table
2-04 Trunk Output	Trunk Release	Park Lights	See Table

Option 2	Park Lights	(-)
Option 3	Horn	(-)
Option 4	GWA	(-)
Option 5	Aux 1	(-)
Option 6	Aux 2	(-)
Option 7	Disarm	(-)
Option 8	Rearm	(-)

*Programming can be done with the SHHP-BT or Manually

**Start/Stop not supported on SIC3-K2

STEP 1  Turn the Ignition ON-OFF-ON	STEP 2  Press the Prog. Button 1x The LED will Flash 1x	STEP 3 25 Second Time Limit  Press the Prog. Button 1x - Menu 1 2x - Menu 2 8x - Reset	STEP 4 WAIT 3 Seconds  LED will flash to confirm 1x - Menu 1 2x - Menu 2 8x - Reset	STEP 5 25 Second Time Limit  Press the Prog. Button 1x - Sub Menu 1 2x - Sub Menu 2 3x---9x - Sub Menu 3-9
STEP 6 WAIT 3 Seconds  LED will flash 1x - Menu "X" - 1 2x - Menu "X" - 2 3x---9x - Menu "X" - 3-9	STEP 7 25 Second Time Limit  Press the Prog. Button 1x - Option 1 2x - Option 2 3x---8x - Options 3-9	STEP 8 WAIT 3 Seconds  LED will flash to confirm 1x - Option 1 2x - Option 2 3x---9x - Option 3-9	STEP 9  To continue programming repeat steps 5-8	STEP 10  Turn the Ignition OFF to exit programming.